


(MF SENSOR C.B.A.)

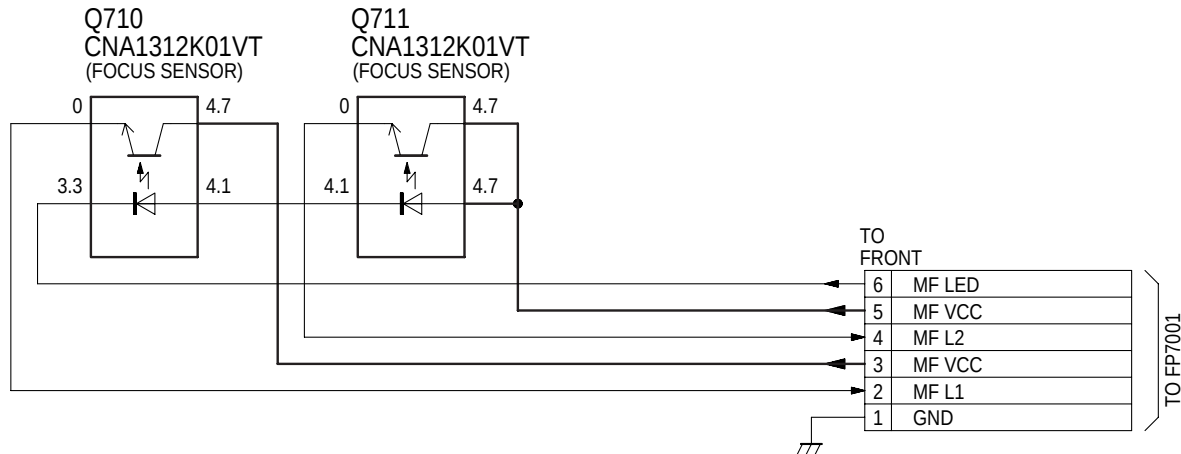

NOTE:
DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC
DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE
REFER TO PARTS LIST.

NOTE:
THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS
DIAGRAM IS STOP MODE.

NV-GS200SERIES,GS120SERIES
MF SENSOR SCHEMATIC DIAGRAM
(NV-GS200SERIES ONLY)

1

2

3